 
 


REPLACEMENT BRUSH FOR

 
RYOBI

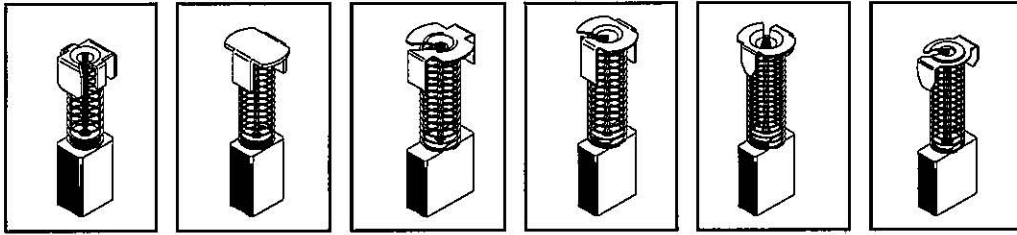


KBRYB013 6 x 8 x 13.5/11.8 mm. **KBRYB043** 6.5 x 9.5 x 16.5 mm. **KBRYB045** 6.5 x 16 x 17/16 mm. **KBRYB053** 6.3 x 13.3 x 18.5/17 mm. **KBRYB065** 6.3 x 13.5 x 20/17.5 mm. **KBRYB073** 7 x 16 x 19.5/18 mm.

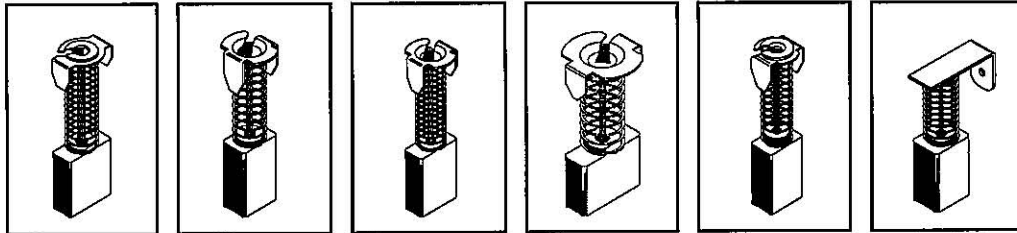


KBRYB075 7 x 16 x 19.5/18 mm. **KBRYB107** 6 x 9 x 16/15 mm. **KBRYB127** 5.3 x 11 x 16/15.2 mm. **KBRYB185** 7 x 19 x 16/14 mm. **KBRYB207** 7 x 11 x 19.5/17 mm. **KBRYB213** 6 x 8 x 13/12 mm.

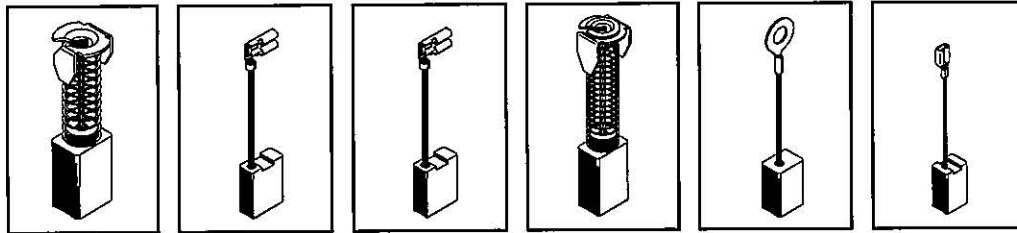

 
KBRYB327 6 x 8 x 14/12 mm. **KBRYB373** 7 x 16 x 20 mm. **KBRYB375** 7 x 16 x 20 mm. **KBRYB505** 6.5 x 9.5 x 13/15 mm. **KBRYB557** 6 x 8 x 12 mm. **KBRYB563** 6 x 8 x 13 mm.

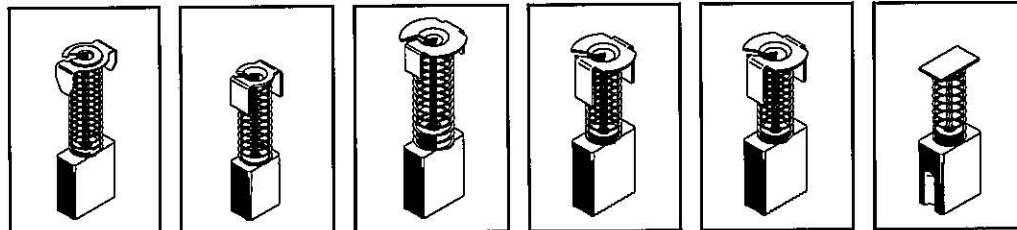

 KBRYB603 7 x 16 x 19.5/18 mm. **KBRYB623** 5 x 8 x 11.5/10.8 mm. **KBRYB815** 6.4 x 13.5 x 21/17 mm. **KBRYBAP13/11B** 6.5 x 13.5 x 18/17 mm. **KBRYBCMS10/75** 6.5 x 13.5 x 18/17 mm. **KBRYBCMS812/15** 6.2 x 10.2 x 15.2/13.3 mm.

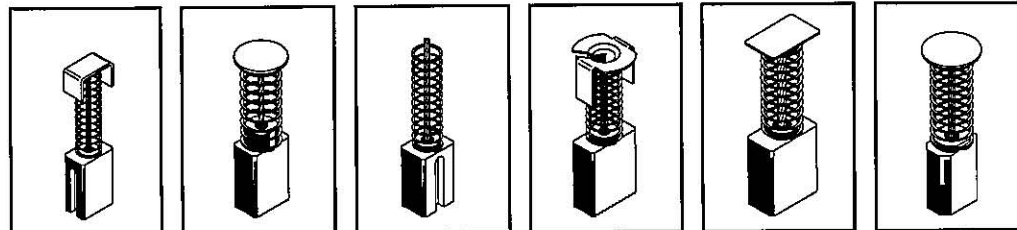

 KBRYBCOJ520V/13 5 x 8 x 12.5/12 mm. **KBRYBEB57076/67** 5 x 8 x 15/12 mm. **KBRYBEPN920/71** 6 x 8 x 14/12.8 mm. (NO BRUSH HOLDER) **KBRYBHBT250/60** 6.5 x 13.5 x 18/17 mm. **KBRYBHCS1300** 6.5 x 11.9 x 16/14.5 mm. **KBRYBHG710** 5 x 8 x 12.2/11 mm. (OLD CODE KBRYB710)

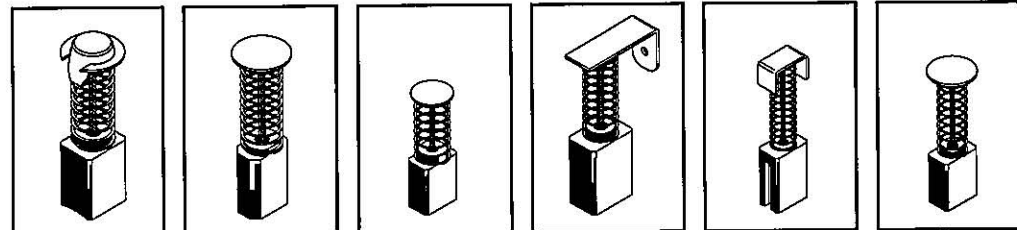

KBRYBHG910 6.5 x 8 x 12.4/10.8 mm. (OLD CODE KBRYB710) **KBRYBHID10/04** 5 x 8 x 12.2/11 mm. **KBRYBHID550VR/25** 5 x 8 x 11.5/10 mm. **KBRYBHID600VR/20** 5.8 x 8.7 x 13.5/12 mm. **KBRYBHJ55VA/19A** 5 x 8 x 12.5/12 mm. **KBRYBHP650/37** 5 x 8 x 11.5/10.2 mm.


PART NUMBER CROSS REFERENCE

RYOBI NO.	ELECTROBRUSH SUPPLIES co. NO.
6540013, 6540023	KBRYB013
6540043	KBRYB043
6541073	KBRYB045
6540053	KBRYB053
6541283	KBRYB065
6541073	KBRYB073
6541073	KBRYB075
6540107 6540103	KBRYB107
6540123	KBRYB127
	KBRYB185
6540573	KBRYB207
6541213	KBRYB213
6540543	KBRYB327
6541373	KBRYB373
6541373	KBRYB375
6540505	KBRYB505
6541557	KBRYB557
6540563	KBRYB563
6541073 6540613 6540603	KBRYB603
6540623	KBRYB623
6540815	KBRYB815
AP 13/11B, MCS 10/75, IBT 250/60	KBRYBAP13/11B
AP 13/11B, MCS 10/75, IBT 250/60	KBRYBCMS10/75
CMS 812/15	KBRYBCMS812/15
COI 520V/13, HI 55 VA/19A	KBRYBCOJ520V/13
EBS 7076/67	KBRYBEB57076/67
EPN 920/71	KBRYBEPN920/71 (NO BRUSH HOLDER)
AP 13/11B, MCS 10/75, IBT 250/60	KBRYBHBT250/60
CIRCULARSAW HCS 1300	KBRYBHCS1300
HID 10/04	KBRYBHG710 (OLD CODE KBRYB710)
HG 710/14	KBRYBHG910 (OLD CODE KBRYB710)
HID 10/04	KBRYBHID10/04
HID 550 VR/25, 6540505	KBRYBHID550VR/25
HID 600 VR/20	KBRYBHID600VR/20
COI 520V/13, HI 55 VA/19A	KBRYBHJ55VA/19A
HD 650/37	KBRYBHP650/37


UP DATE 20/10/08

REPLACEMENT BRUSH FOR

 
RYOBI

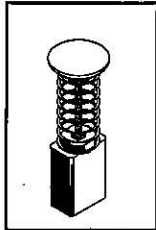


KBRYBPD850VR/09
5 x 8 x 12/11.2 mm.

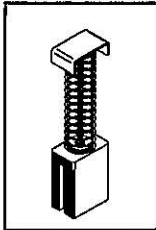 


KBRYBRBV18/26-2
7 x 11 x 16/15 mm.

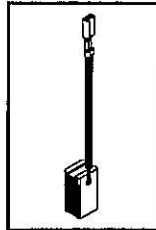 


KBRYBT020100
6.5 x 8 x 15 mm.

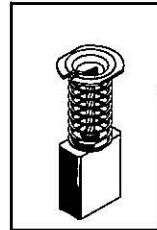 


KBRYBPD1052VR/04
5.5 x 11 x 14 mm.

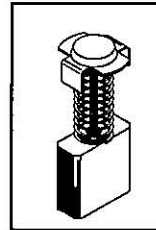 


KBRYBMS2254/089
7 x 17 x 17 mm.

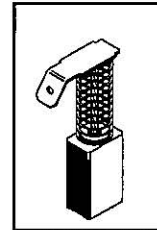 


KBRYB455
6 x 9 x 16/15 mm.

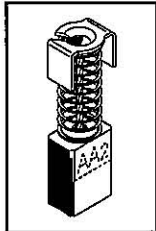 


KBRYB277
5 x 8 x 11.5/10.8 mm.

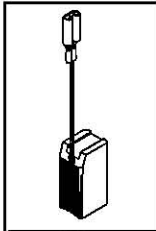 


KBRYBCP0902VR/48
6.5 x 8 x 15.2 mm.

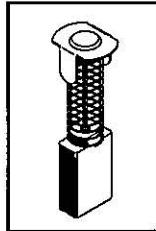 

 
KBRYBMS185A/38
5.5 x 11.2 x 19.5/17.2 mm.

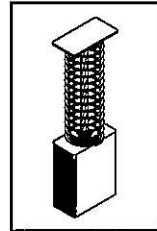


KBRYBCS235L/71
7 x 13 x 17.5/16.5 mm.

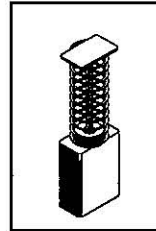 


KBRYBCS1500L/68
6 x 11 x 16.5/15 mm.

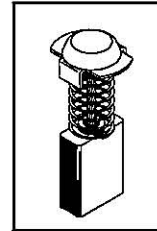 


KBRYBCS185/54
5 x 11 x 16/15 mm.

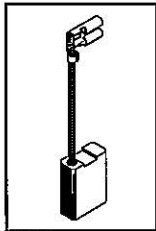 












KBRYB555
7 x 16 x 20 mm.

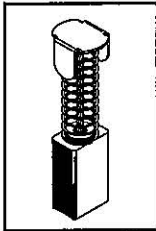 

KBRYB627
6 x 9 x 16/15 mm.

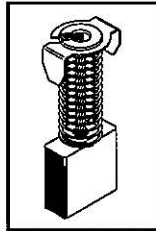 

KBRYB374EB
6.5 x 16 x 17.5/16 mm.

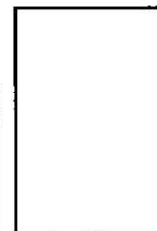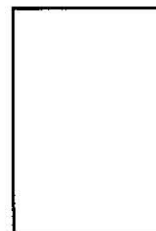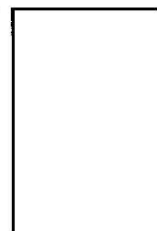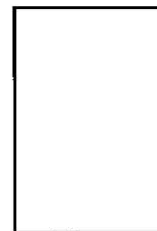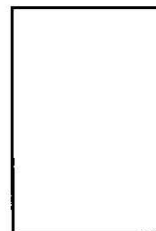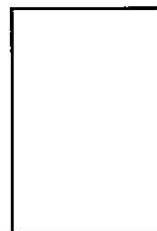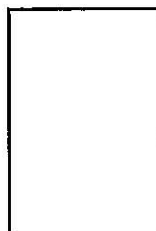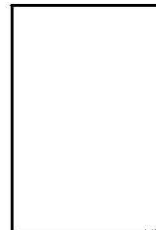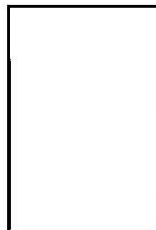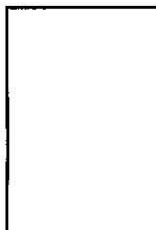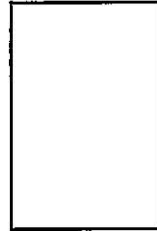           

PART NUMBER CROSS REFERENCE

RYOBI NO.	ELECTROBRUSH SUPPLIES <i>cc</i> NO.
PD 850 VR/09	KBRYBPD850VR/09
RBV 18/26-2	KBRYBRBV18/26-2
T 020100	KBRYBT020100
1052VR/04	KBRYBPD1052VR/04
2254/089	KBRYBMS2254/089
455	KBRYB455
277	KBRYB277
090ZUR/48	KBRYBCP090ZUR/48
185A/38	KBRYBMS185A/38
235L/71	KBRYBCS235L/71
1500L/68	KBRYBCS1500L/68
185/54	KBRYBCS185/54
555	KBRYB555
627	KBRYB627
374EB	KBRYB374EB

UP DATE 20/10/08

(OLD CODE KBRYB710)